


Tang Break-Off Tool

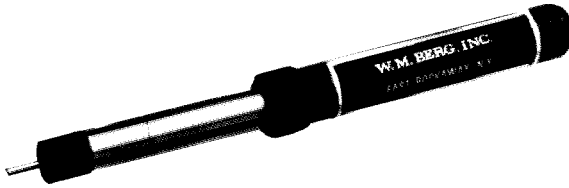

STOCK NUMBER	THREAD SIZE
Y16-T2	# 2-56
Y16-T4	# 4-40
Y16-T6	# 6-32
Y16-T8	# 8-32
Y16-T10	# 10-24 10-32
Y16-T12	1/4-20

Remove tang to avoid interference with the screw.

F
35B